



Permanent Mounting Instructions

- IMPORTANT:** Please read all of the following instructions before installing your new warning light.
- CAUTION:** All of our DC powered warning lights are polarity sensitive. These lights are polarity protected *only if the appropriate fuse is used*. All wires connected to the positive terminal of the battery should be fused at the battery for their rated load. **Testing the light before this fuse is properly installed will void the warranty on the light.**
- Permanent mount lights are mounted using four bolts that screw into molly well nuts in each corner of the minibar. Mark the four mounting holes (and the center wire hole, if you will be needing one). Mark the holes on the corners of a 14-1/2" x 5-1/2" rectangle.

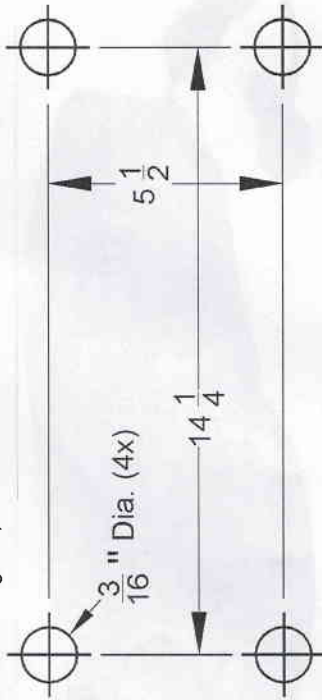

 
- Check the underside of the marked locations to ensure that you do not damage any wires or other components. Drill a 3/16" hole in the four marked spots for the mounting bolts, and one in the center for your wires (if applicable).
- CAUTION: Take care not to drill through the headliner below.**
- If the 4 threaded molly well nuts are not already installed in the base of your bar, install them by pressing one into each of the four holes found on the corners of the base of the light until the lip rests on the bottom surface of the base.

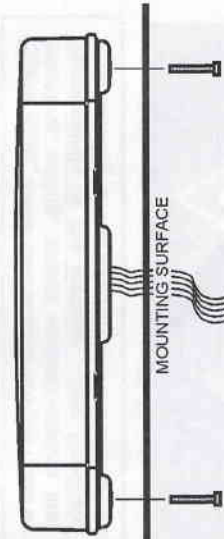

- Route your wires through the center hole (if applicable) and attach the light using the four enclosed bolts. Insert the bolts from below, through the holes you drilled in the mounting surface and screw them into the molly well nuts on the light. Tighten until snug.

Vacuum Magnet Mounting Instructions

If you are mounting the light on the roof of your vehicle, take extreme care to ensure that the magnet is firmly seated on your roof, and that the pull of the magnet is sufficient to secure the light in place. Since the composition of the metal in the roofs of different vehicles may vary, as well as the contour, texture, and/or condition, Star cannot guarantee the ability of the light to remain in place on a moving vehicle. **It is the sole responsibility of the owner to ensure the warning light is secure.**



Care should be taken when routing the cig plug cord so that it does not interfere with the proper operation of the driver-side or passenger-side airbag! Failure to heed this warning may result in serious or fatal injury.

Hard Wire Instructions (Perm Mount Models)

- Black - (Ground)** Connect to the negative side of the battery.
- Purple - (Optional - High/Low)** Used to switch the light between High and Low power.
- Leave disconnected for High Power only (cover with wirenut or tape).
 - Connect to Ground for Low Power only.
 - Connect to Ground through a switch for High/Low switching option.
- White - (Synchronization)** Used to synchronize two lights together. If you are only installing one unit, cut the White wire short and tape the end. If you will be synchronizing two or more approved synchronizable lights, *leave the white wire disconnected for now*. Connect the white wires from both units together **ONLY AFTER PROGRAMMING** them for the **same** pattern (see Pattern Programming).
- Red - (Power)** Connect to +12-24 VDC through your switch. Be sure to use a **10 amp fuse** when connecting the switch to the positive side of the power supply.
- Red w/Green - (Pattern Select)** Touch and release to +12-24 VDC to change patterns.

Pattern Programming

- To begin the programming sequence, power up the light so that it is flashing.
- To change the flash pattern, press and release the Pattern Select Button (cig plug models only) or briefly touch and release the Red w/Green Stripe wire to +12-24VDC (hard-wired versions only). Repeat this to scroll through the patterns listed below. The cycle repeats after the last pattern.

There are several patterns that you can "jump" to via programming shortcuts. Touch and hold the Red w/Green Stripe Wire to +12/24VDC (or hold the Pattern Select Button) for the length of time that corresponds to the pattern you would like to jump to.

- Once you find the pattern you wish to display, tape off the Red w/Green wire (hard-wire only) and deactivate the light. This will store the selected pattern.



Hold For	Unit Blinks	Shortcut to
3 seconds	1 time	Pattern 1
6 seconds	2 times	Pattern 6
9 seconds	3 times	Pattern 13
12 seconds	4 times	Pattern 16

Flash Pattern #	Pattern Type	Pattern List	CPS
1	K	Alternating Flicker †	1.0
2	L	Alternating Fast Doubleflash	3.3
3	M	Alternating Tripleflash	2.5
4	N	Alternating PSU Flicker	0.7
5	O	Alternating PSU Random	0.6
6	F	Alternating Quadflash ††	1.0
7	G	Alternating Quadflash w/Post-Pop	1.0
8	H	Alternating Singleflash	1.0
9	I	Alternating Doubleflash	1.0
10	J	Alternating Variable	0.3
11	C	Post Pop	1.4
12	E	Random	0.4
13	P	Alternating Quintflash †††	1.2
14	R	Alt. Fast Doubleflash, Alt. Flicker	N/A
15	S	Alt. Quad, Alt. Flicker, Alt. Double, Flicker	N/A
16	G	Sim. Quad w/Post Pop (Phase 1) ††††	1.0
17	G	Sim. Quad w/Post Pop (Phase 2) *	1.0
18	U	Alt. Triple, Alt. Non-Synch Double, Alt. Quint, Flicker	N/A
19	V	Steady burn one side, Other side Single Flash	1.0
20	NONE	Cycle All	N/A

† = Programming Shortcuts 1, 2, 3, and 4 (see table above)